



AWZ511

v.2.0

MS

Relay module



Edition: 4 from 10.07.2013
Supersedes the edition: 3 from 02.06.2010

EN

1. Intended use.

The MS (AWZ511) relay module is to be used in low-voltage installations. It is intended for controlling and status indication in e.g. alarm or access control systems. It may be used to control devices of high power consumption via OC outputs of alarm systems. Moreover, it ensures galvanic isolation of signals, power sources relating to the outputs of the module. It features a serial fuse in the circuit of the relay (FUSE, R-)

2. Installation.

The module is equipped with a plastic panel with self-adhesive tape that enables fixing it to a flat surface (side panel of an enclosure, a buffer PSU, etc.) and holes for bolting the panel to the mounting surface.

3. Description of the module.

3.1 Components.

1 – fuse
2 – LED (indicates relay's operations)
3 – relay
4 – module's terminals

3.2 Connectors.


FUSE – fuse-protected output
R+,R- relay control voltage inputs
D – control output
C1, C2 – common terminal of the relay
NO1, NO2 – normally open relay's contact
NC1, NC2 – normally closed relay's contact

4. Specifications.

Voltage of the relay's coil	10÷14V DC (-/+5%),
Current of the relay's coil	25mA@12VDC
Number of relays	1
Voltage of the relay's contacts	30VDC / 250VAC max.
Current of the relay's contacts	2A max.
ON/OFF time	15ms/8ms (-/+5%)
Operating conditions	2nd environmental class, -10°C ÷ 40°C
Enclosure	open-frame design, IP00
Dimensions	W=70, L=43, H=20 [mm, +/-2]
Net/gross weight	0,034 / 0,051 [kg]
Installation:	installation tape or installation bolt x2
Declarations, warranty	CE, RoHS, 2 year from the production date
Notes	leads on connections: Ø 0,41÷1,63 (AWG 26-14), Ø 0,51÷2,05 (AWG 24-12) - relay contacts

Fig. 1. General view of the module.

5. Electrical diagram.

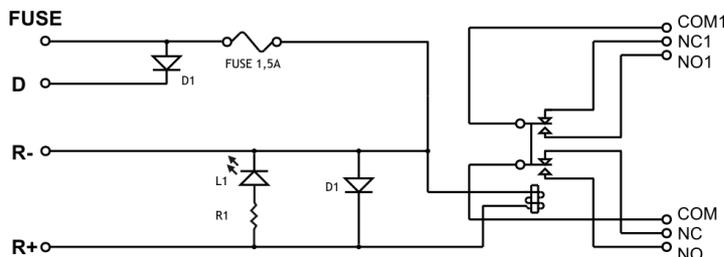

WEEE PARKING

According to the EU WEE Directive – It is required not to dispose of electric or electronic waste as unsorted municipal waste and to collect such WEEE separately.

WARRANTY

Pulsar K. Bogusz Sp.j. (the manufacturer) grants a two-year warranty for the equipment, counted from the device's production date.

Pulsar K.Bogusz Sp.j.

Siedlec 150, 32-744 Łapczyca, Poland
Tel. (+48) 14-610-19-40, Fax. (+48) 14-610-19-50
e-mail: biuro@pulsar.pl, sales@pulsar.pl
http:// www.pulsar.pl, www.zasilacze.pl