

# **AWZ512** v.2.1 PU<sub>2</sub> Relay module



Edition: 4 from 10.07.2012 Supersedes the edition: 3 from 02.06.2010

EN

#### 1. Destination.

The PU2 (AWZ512) relay module is to be used in low-voltage installations. It is intended for controlling and status indication in e.g. alarm or access control systems. It may be used to control devices of high power consumption via OC outputs of alarm systems. Moreover, it ensures galvanic isolation of signals, power sources relating to the outputs of the module.

# 2. Module description.

## 2.1 Module elements.

1 -relay	
2 –fuse	
3 - LED (indicates relay's operations)	
4 – relay's output terminals	

#### 2.2 Module terminals.

-I+ inputs of the voltage that control the relay		
C – common terminal of the relay		
NO – normally open relay's contact		
NC – normally closed relay's contact		

# 3. Specifications.

Voltage of the relay's coil	10 ÷ 16V DC/AC (-/+5%),
Current of the relay's coil	30mA@12VDC
Number of relays	2
Voltage of the	30VDC / 50VAC max.
relay's contacts	
Current of the	1A max.
relay's contacts	
Fuse F1-F2	2 x F 1,5A
Operating conditions	2nd environmental class -10℃÷ 50℃
Dimensions	80 x 20 x 43 (WxHxD)
Net/gross weight	0,04 / 0,07 [kg]
Installation	installation tape or installation bolt x2
Declarations,	CE, RoHS, 2 year from the production date
warranty	
Notes	leads on connections: Ø 0,41÷1,63

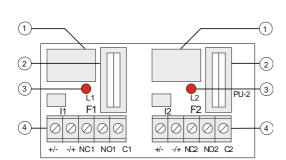


Fig. 1 The view of the module.


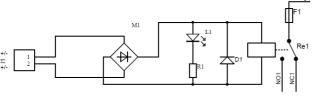


Fig.Electrical diagram.

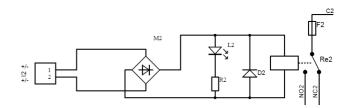

#### **WEEE PARKING**

According to the EU WEE Directive - It is required not to dispose of electric or electronic waste as unsorted municipal waste and to collect such WEEE separately.

#### WARRANTY

Pulsar K. Bogusz Sp.j. (the manufacturer) grants a two-year warranty for the equipment, counted from the device's production date.

### Pulsar K.Bogusz Sp.j.

Siedlec 150, 32-744 Łapczyca, Poland Tel. (+48) 14-610-19-40, Fax. (+48) 14-610-19-50 e-mail: biuro@pulsar.pl, sales@pulsar.pl http://www.pulsar.pl, www.zasilacze.pl