




4. Adjustment

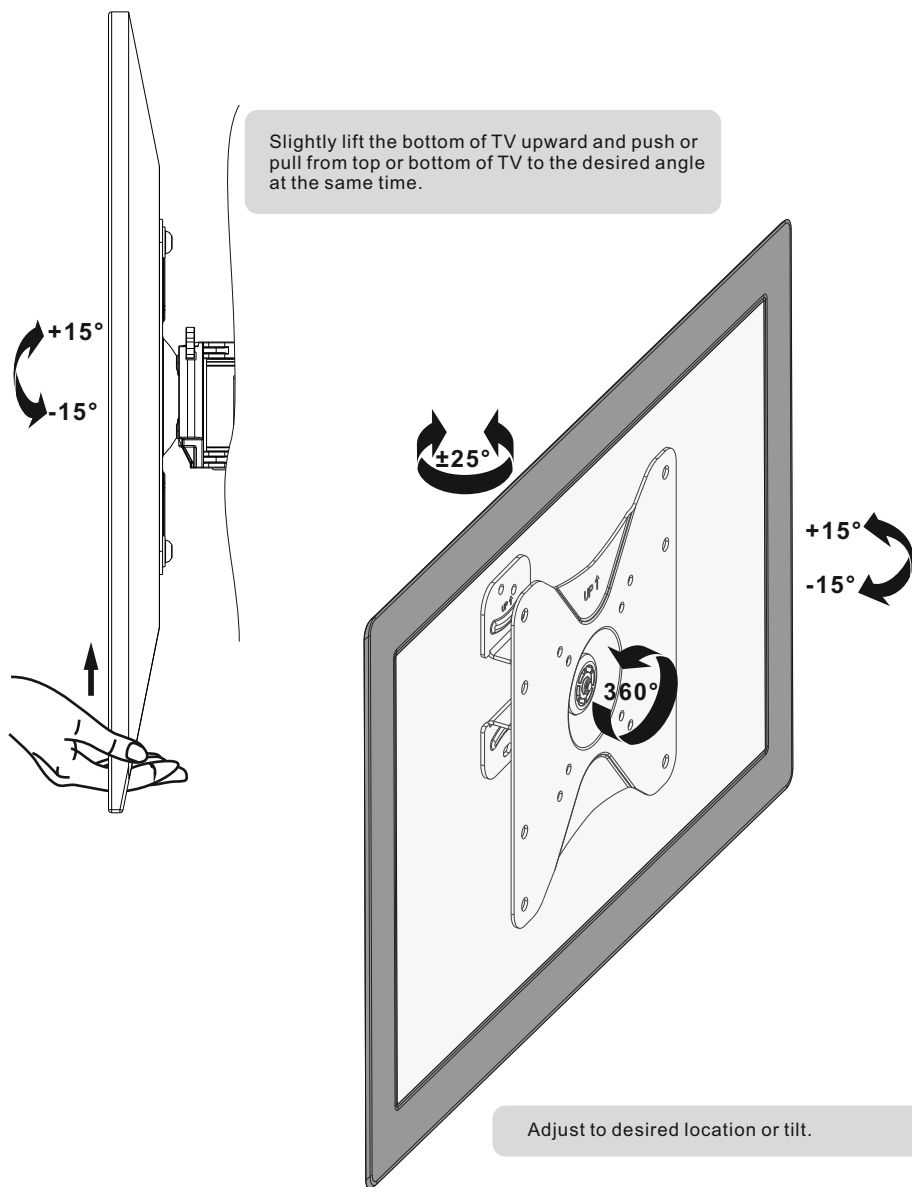


Maintenance

- Check that the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your dealer if you have any questions.

INSTALLATION INSTRUCTIONS

Full Motion LED,LCD TV Wall Mount

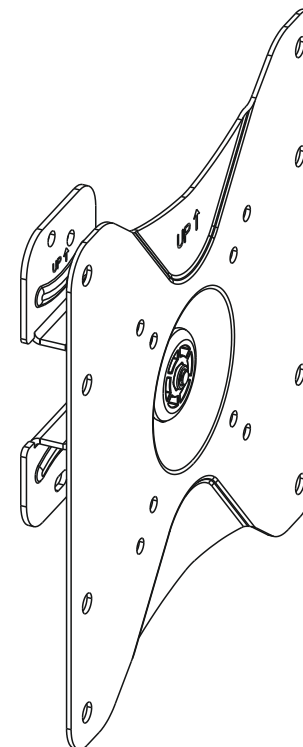

CAUTION: DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

LDA05-220



75x75/100x100
200x100/200x200



ISSUED: OCT. 2012


NOTE: Read the entire instruction manual before you start installation and assembly.

⚠ WARNING


- Do not begin the installation until you have read and understood the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instruction or warning, please contact your local distributor.
- This mounting bracket was designed to be installed and utilized **ONLY** as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone of good mechanical ability, with basic building experiences and fully understanding of this manual.
- Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. Use of a stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can damage the items, greatly reducing their holding power.
- This product intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist


IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installing. If any parts are missing or faulty, telephone your local distributor for a replacement.

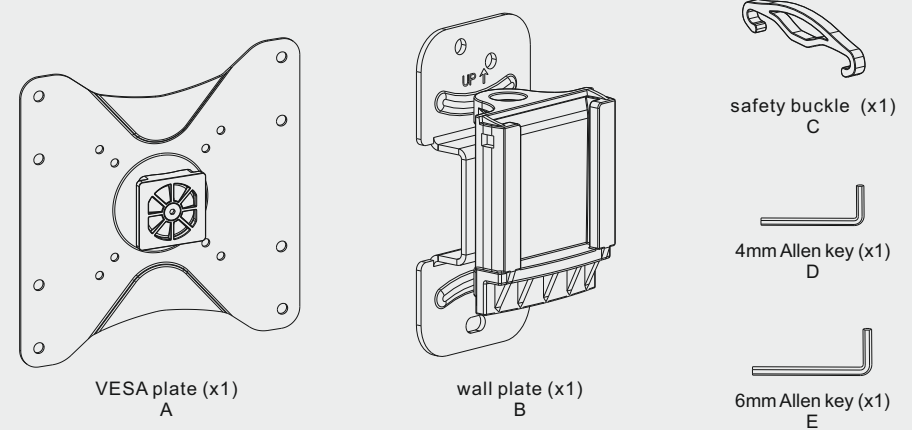




Package M

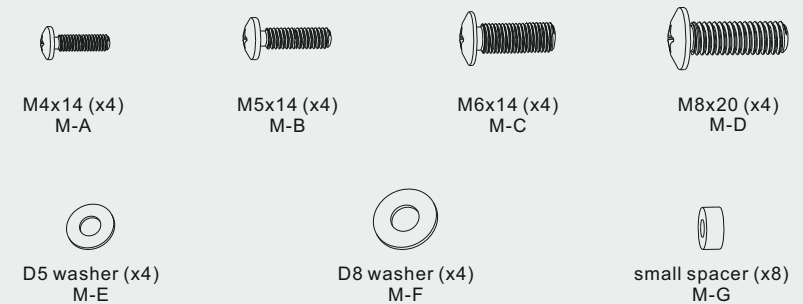


Package W

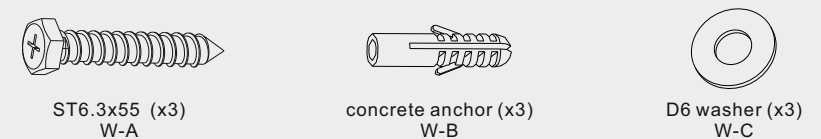



1a. Mount on Wood Stud Wall

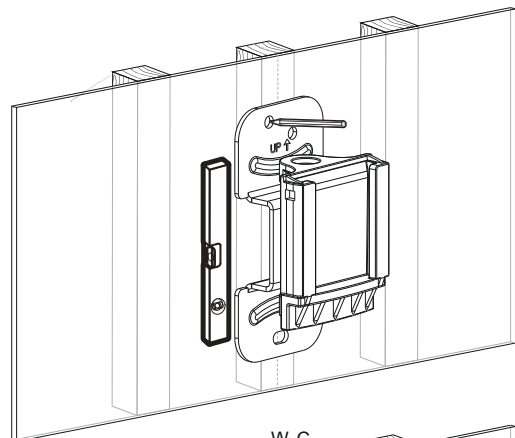  

Find and mark the exact location of mounting holes

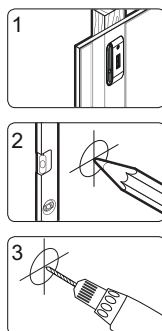

Drill pilot holes

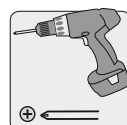 




Screw the wall plate onto the wall

with the up arrow of the plate upward


! WARNING

- Make sure that mounting screws are anchored into the center of the studs. Use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.


 
 
1b. Mount on Solid Brick and Concrete Block

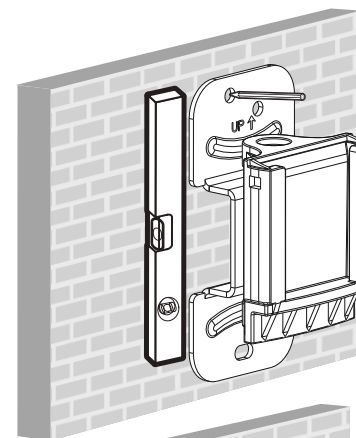

Mark the exact location of mounting holes

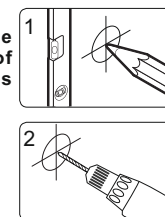

Drill pilot holes

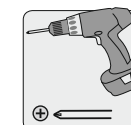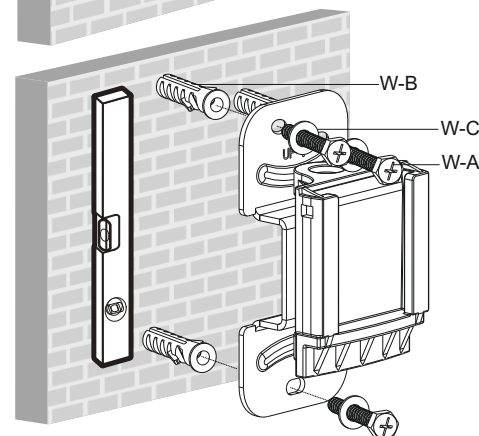 


Screw the wall plate onto the wall

with the up arrow of the plate upward



! WARNING

- When installing wall mounts on cinder block, verify the actual concrete thickness is at least 1-3/8" (35mm) for using the concrete anchors. Do not drill into mortar joints! Be sure to mount in a solid part of the block, generally 1" (25mm) minimum from the side of the block. It is suggested electric drill on slow setting is used to drill the hole instead of a hammer drill to avoid breaking out the back of the hole when entering a void or cavity.
- Installers must verify that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.

2. Install VESA Plate

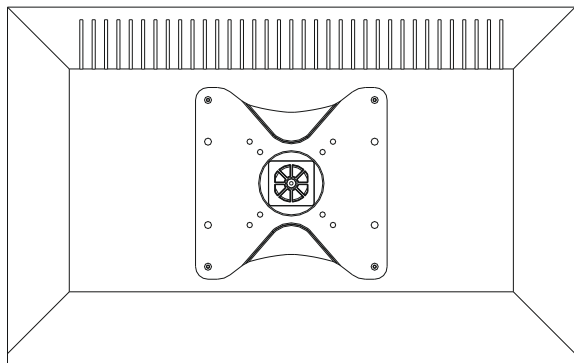

 with the up arrow of the VESA plate upward

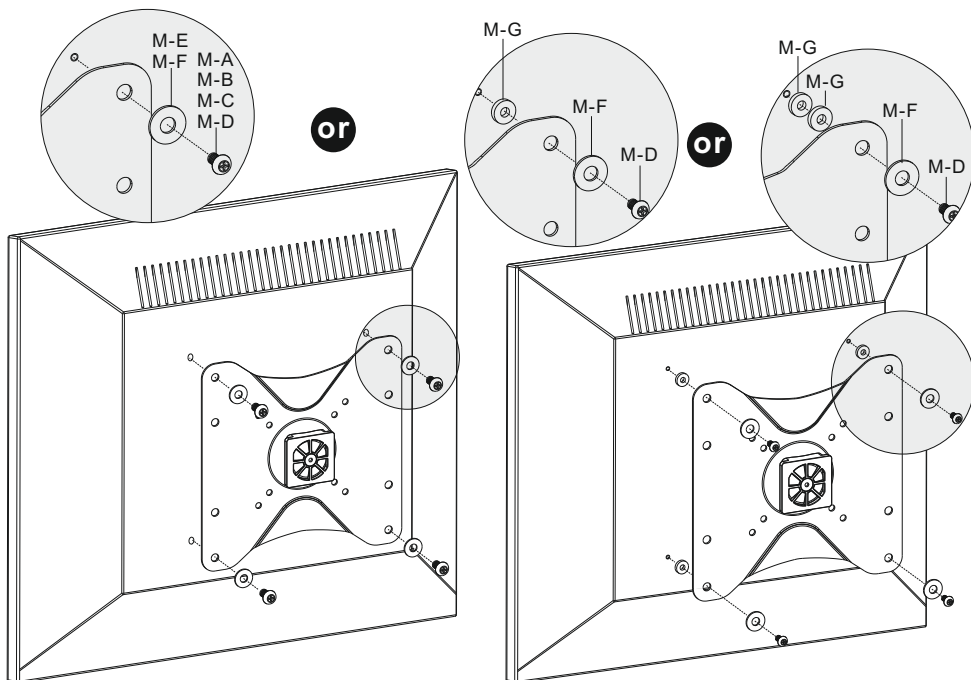



Note: Choose appropriate screws, washers and spacers (if necessary) according to the type of screen. Screw VESA plate onto the TV.



⚠ Tighten all screws but do not over tighten.

3. Hang TV onto the Wall Plate

It is necessary to slightly loosen or tighten the adjustment screw using a 4mm Allen key.

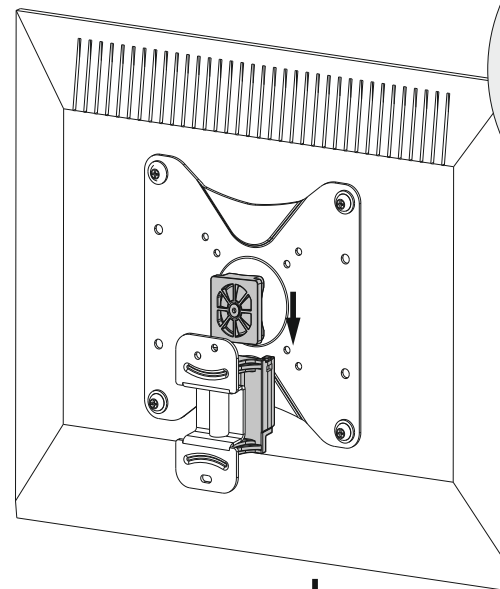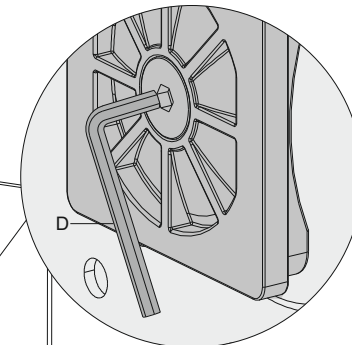

Lift TV slowly and insert the head of VESA plate along VESA plate mount rail until it snug fits into the VESA plate mount.

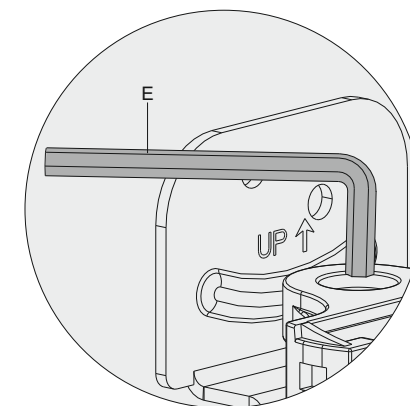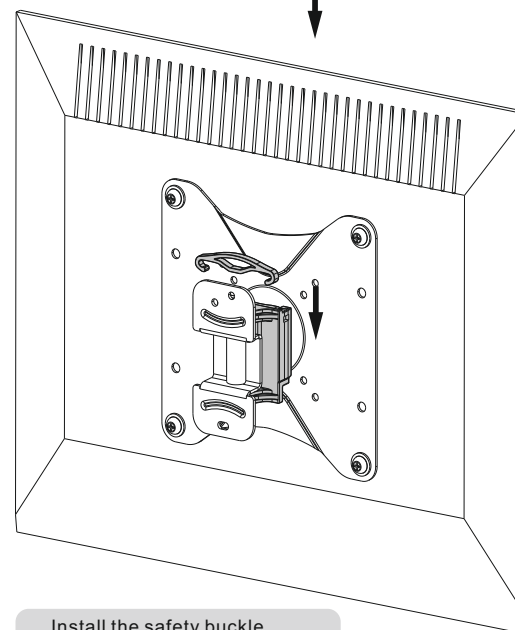

Tighten joint using appropriate Allen key when joint has been come loose in use.

Install the safety buckle.