
 

It is essential to read the instructions.

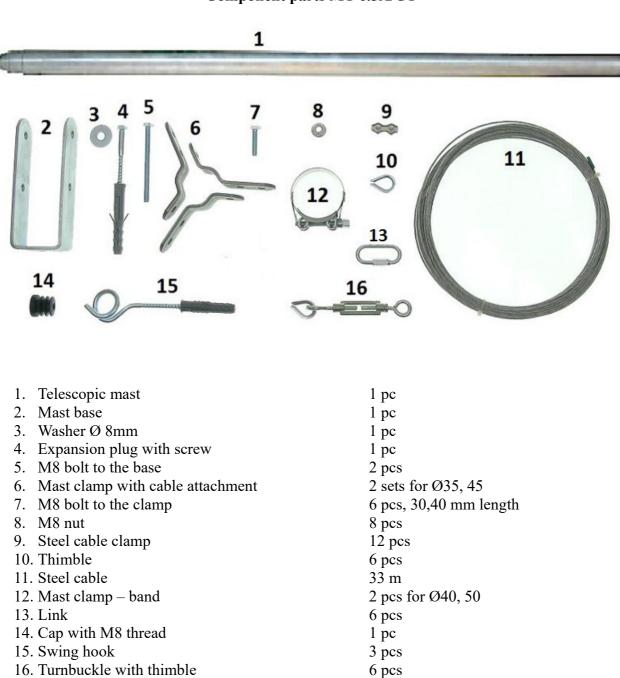

Component parts MT-6.5A/CT

Observe the safety rules during assembly



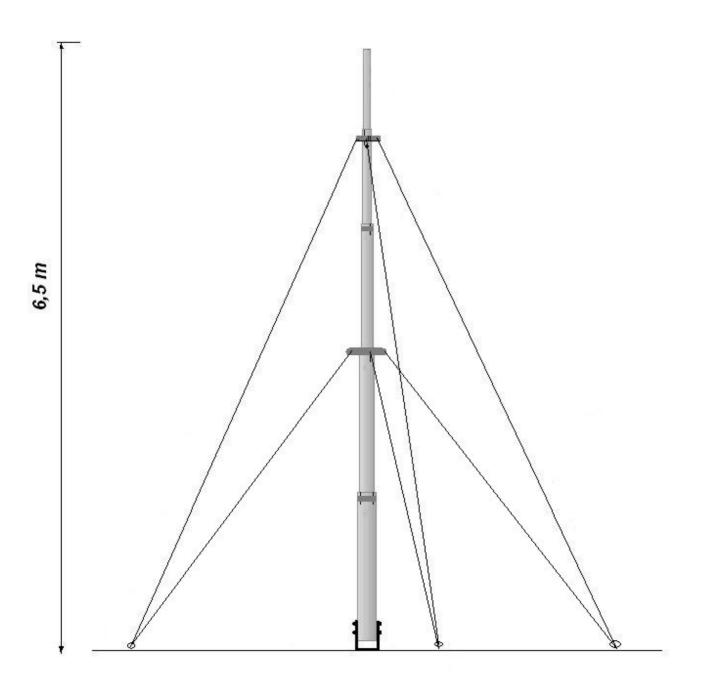

The mast requires periodic inspection of bolted connections and general condition.

The manufacturer reserves the right to make technical changes that do not affect the durability of this product.

Installation instructions

- 1. Prepare steel cables in appropriate lengths to the fixing points (with the same spacing $\sim 3m$ from the center of the mast, cables length 7m and 4m).
- 2. Arm the cables with thimbles (10) on one side and secure with the clamp (9).



Attach the thimbles and tighten the cable

Tighten the nuts

- 3. Unscrew the turnbuckles (16) and arm the other end of the cable without tightening the nuts tightly at the clamps (9), this will allow the guy-wires to be pre-tensioned.
- 4. Partially extend the mast and install the clamps (9) and (12). If necessary, screw the cap (14) onto the upper section.



5. Attach the mast base (2) to the ground with the screw (4) and washer (3) and secure the mast with one bolt (5).




6. Extend the upper part of the mast by setting it on the markers and secure it with a clamp (6 or 12) according to the diameter of the pipe. Tighten the clamp until the segments (pipes) are jammed.

Repeat the operation in turn for each segment.



7. Hook the cables with the links (13) to the clamps (6).

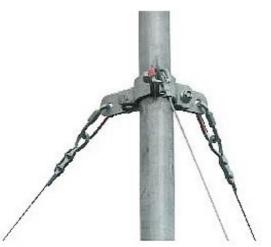

- 8. Fix the hooks (15) in the ground at appropriate distances from the base.
- 9. Raise the mast (at least two people).One person is supporting the mast and the other person puts the second bolt (5) on the base (2) and hooks the cables to the hooks.
- 10. Pull the cables by hand, keeping the mast perpendicular to the ground.



11. Tighten the cables with the turnbuckles.