



**RS108  
v1.0**

**RS108 10-ports switch with power supply for 8 IP cameras, RACK**




Edition: 1 from 26.02.2018  
Supercedes the edition: -----

**EN\*\***

### Features:

- Switch 10 ports
- 8 PoE ports 10/100Mb/s (data transfer and power supply)
- 2 ports 10/100Mb/s (UP LINK)
- 30W for each PoE port, supports devices compliant with the IEEE802.3af/at (**PoE+**) standard
- Supports auto-learning and auto-aging of MAC addresses (1K size)
- LED indication
- Metal enclosure RACK 19" 1U
- - color black RAL 9005
- warranty – 2 year from the production date

### Example of use

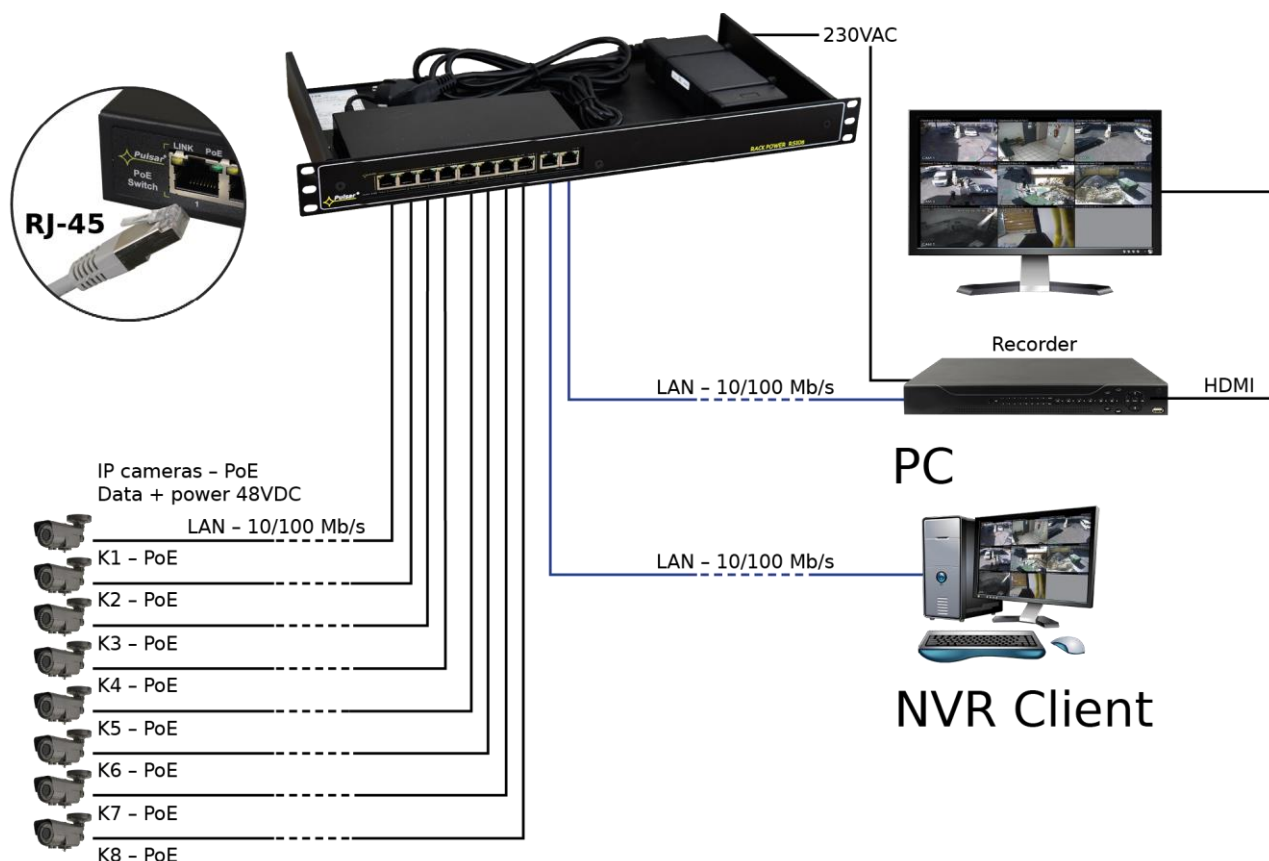

## 1. Technical description

### 1.1. General description.

The RS108 is a 10-ports switch in a RACK 19" metal housing with integrated power supply. Automatic detection of any devices powered in the PoE/PoE+ standard is enabled at the 1 – 8 ports of the switch. The UP LINK ports is used for connection of another network device via RJ45 connector. The LEDs at the front panel indicate the operation status (description in the table 4).

The PoE technology ensures a network connection and reduces installation costs by eliminating the need to supply a separate power cable for each device. This method allows supplying other network devices, such as IP phone, wireless access point or router.

## 1.2 Block diagram.

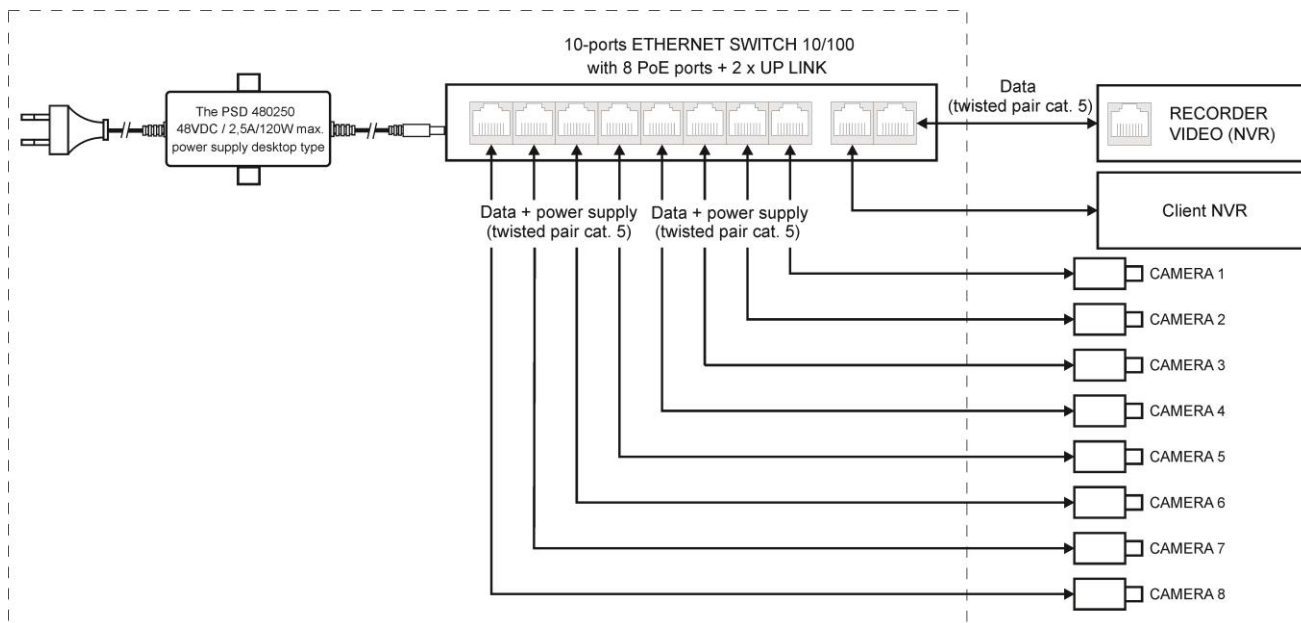


Fig. 1. Block diagram.

## 1.3. Description of components and connectors.

Table 1. (see Fig. 2)

Element no. (Fig. 2)	Description
[1]	2 x UP LINK port
[2]	8 x PoE port (1÷8)
[3]	Switch mode power supply for the switch 48VDC/2,5A/120W
[4]	230V AC power cord

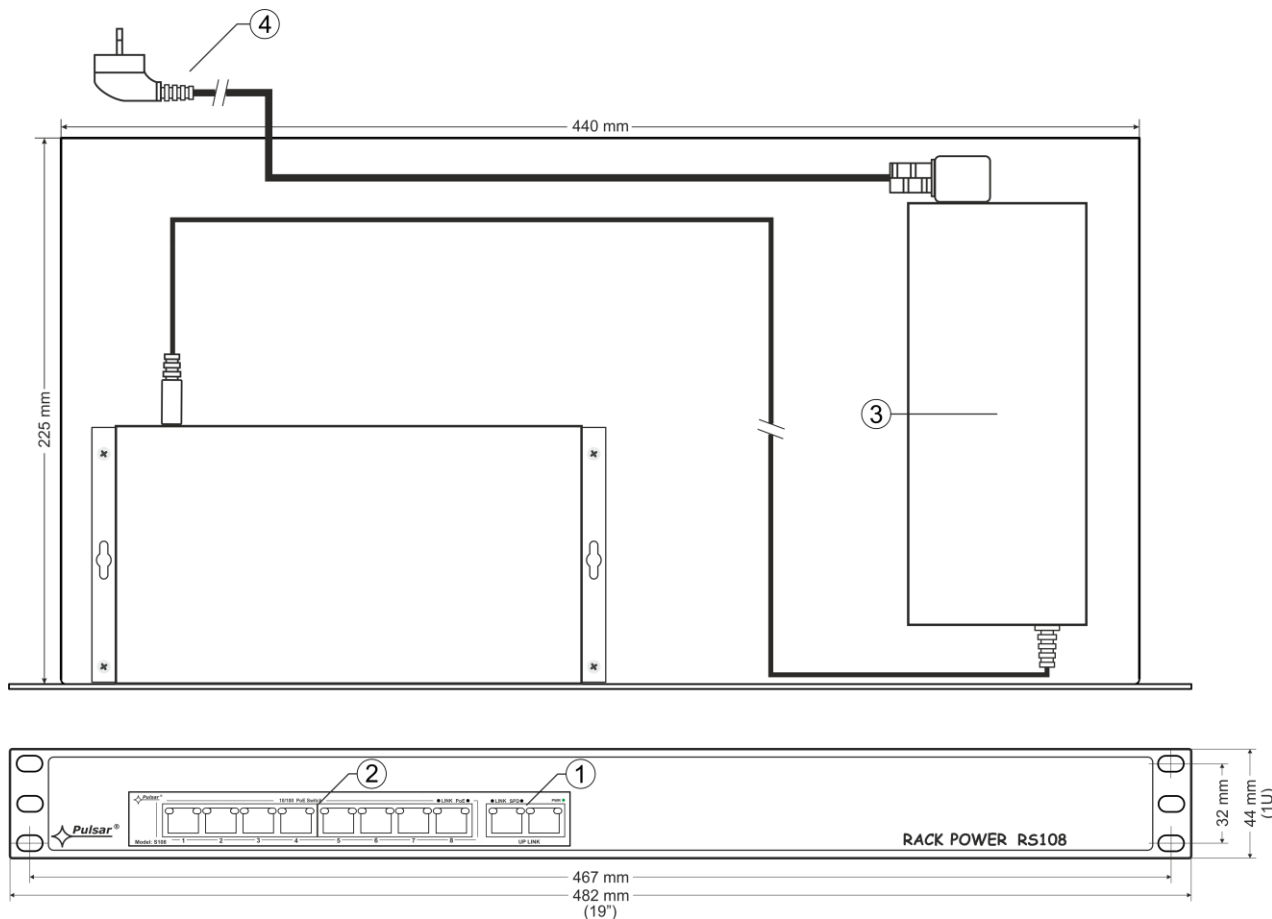
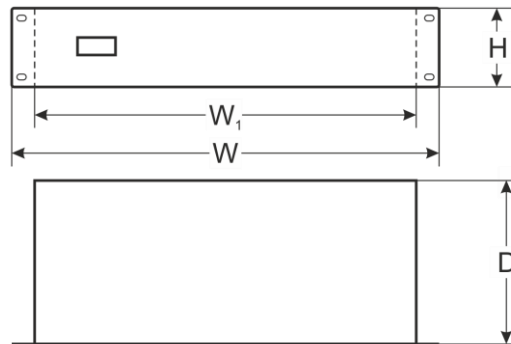


Fig. 2. The enclosure view.

## 1.4. Technical parameters (Table 3.)



**Table 3.**

<b>Ports</b>	10 10/100Mb/s ports (8 x PoE + 2 x UP LINK) with connection speed auto-negotiation and MDI/MDIX Auto Cross
<b>PoE power supply</b>	IEEE 802.3af/at (1÷8 ports), 48V DC / 30W at each port * Used pairs 4/5 (+), 7/8 (-)
<b>Protocols, Standards</b>	IEEE802.3, 802.3u, 802.3x CSMA/CD, TCP/IP
<b>Bandwidth</b>	1,6Gbps
<b>Transmission method</b>	Store-and-Forward
<b>Optical indication of operation</b>	Switch power supply; Link/Act; PoE Status
<b>Power supply</b>	90 ÷ 264VAC 50÷60Hz / 0,6A / 230VAC
<b>Operating conditions</b>	temperature -10°C ÷ 40°C, relative humidity 5% - 90%, no condensation
<b>Mounting dimensions</b>	W=19" H=1U D=227
<b>Dimensions</b>	W=482 W <sub>1</sub> =440 H=44 D=227 [÷/-2mm]
<b>Enclosure</b>	RACK 19" 1U, Steel plate, DC01 1,0mm color RAL 9005
<b>Gross/Net weight</b>	2,0/2,2kg
<b>Protection class EN 60950-1:2007</b>	II (second)
<b>Storage temperature</b>	-20°C ÷ 60°C
<b>Declarations</b>	CE

\* The given value of 30W per port is the maximum value. The total power consumption should not exceed 96W when all PoE ports are being used.

## 2. Installation


### 2.1. Installation procedure

1. The unit should be mounted by a qualified installer, holding relevant permits and licenses (applicable and required for a given country) for 230V/AC interference and low-voltage installations.
2. The unit should be mounted in confined spaces, in accordance with the 2nd environmental class, with normal relative humidity (RH=90% maximum, without condensation) and temperature from -10°C to +40°C.
3. The switch shall operate in a horizontal position in order to ensure free air convection in the Rack cabinet. The switch load balance should be done prior to installation.  
The given value of 30W per port is the maximum value referring to a single output. The total power consumption should not exceed 96W when all PoE ports are being used.  
The increased demand for power is particularly evident in the case of cameras with heaters or infrared illuminators - when launching these features, the power consumption increases rapidly, which may adversely affect the operation of the switch.  
The device is designed for a continuous operation and is not equipped with a power-switch. Therefore, an appropriate overload protection in the power supply circuit should be provided. Moreover, the user should be informed how to disconnect the power supply unit from the mains supply (usually by assigning an appropriate fuse in the fuse box). The electrical system shall be made in accordance with applicable standards and regulations.

### 2.2. Installation procedure

 



1. Mount the switch in a RACK 19 " cabinet.
2. Connect the plug of the power supply switch to the AC 230V socket.
3. Make sure that the device is installed in such a manner and place, that the free flow of air around the device is ensured.
4. Connect the power (~230V).
5. Connect the camera wires to the RJ45 connectors (PoE connectors).
6. Check the optical indication of the switch operation.

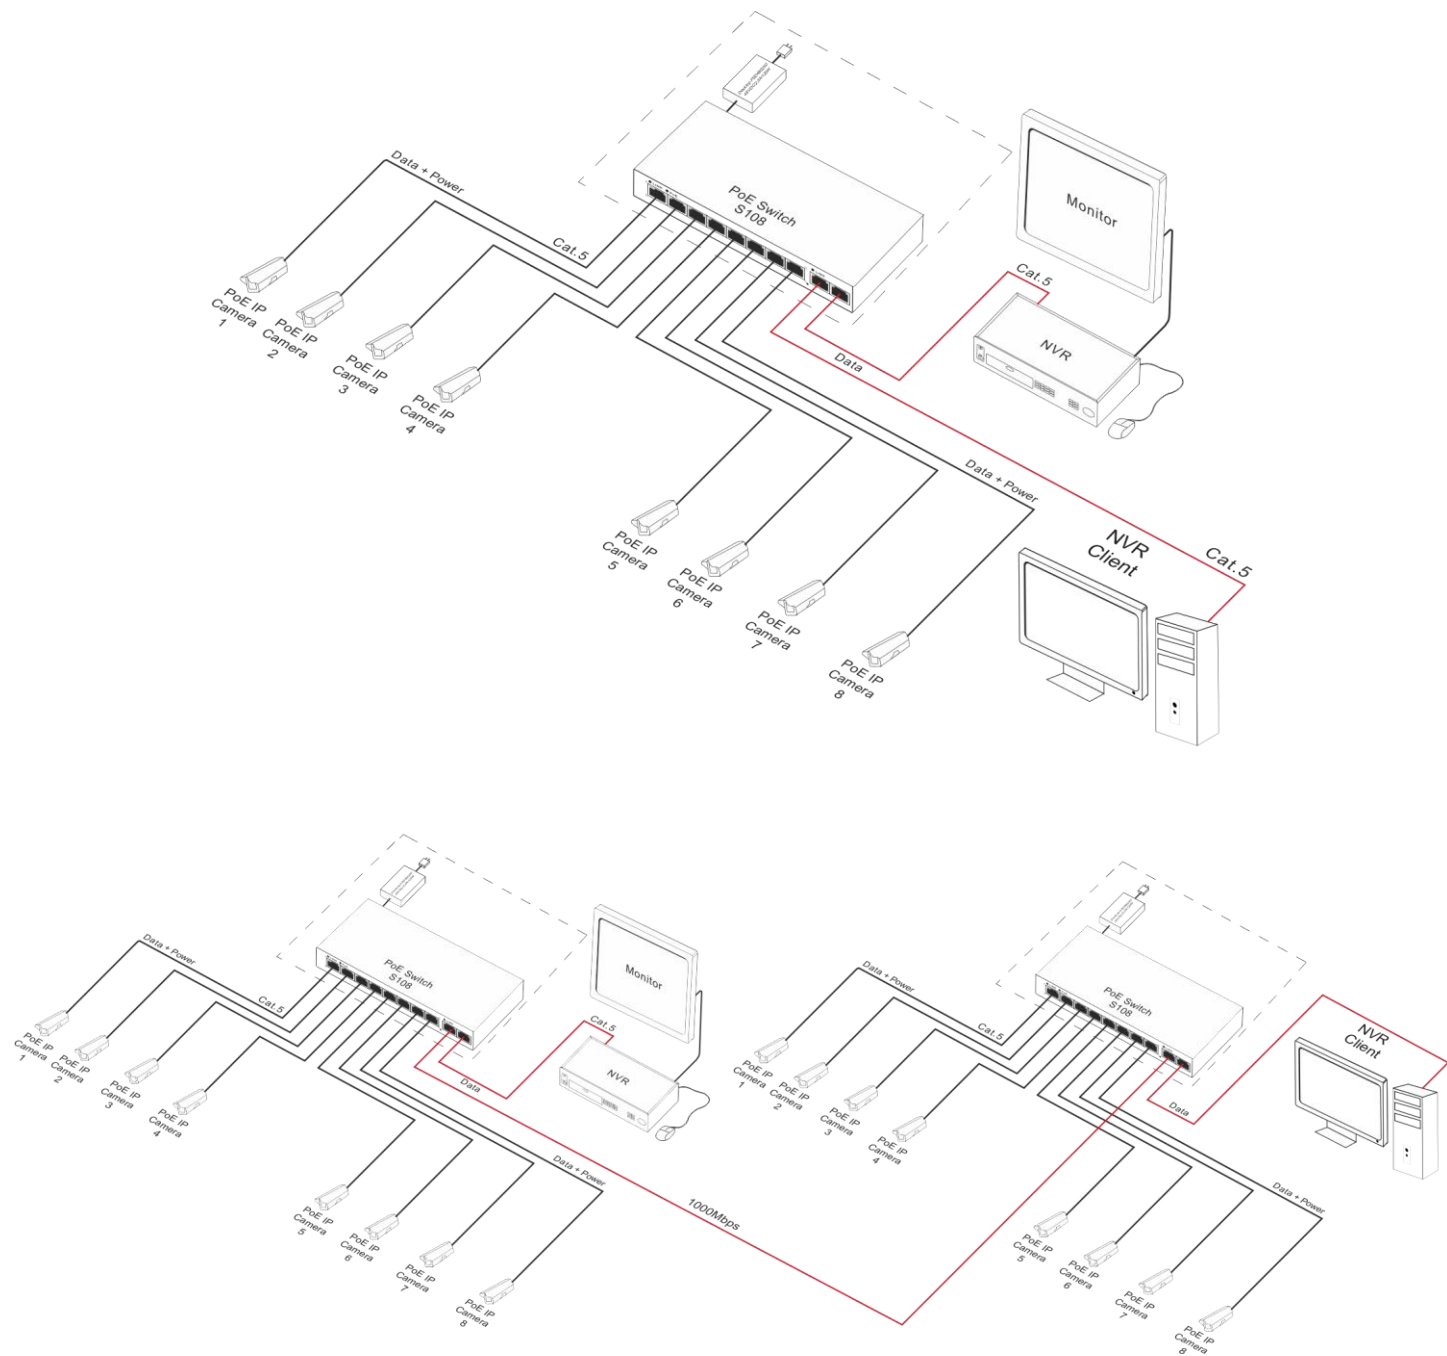Connection schemes



### 3. Operation indication.

Table 4. Operation indication

OPTICAL INDICATION AT THE PoE PORTS (1÷8)		
DIODA LED ZIELONA (PoE) Indication of the PoE power supply at the RJ45 ports		<b>OFF</b> - no power supply at the RJ45 port (the device is not connected or not compliant with the IEEE802.3af/at standard) <b>ON</b> – supply at the RJ45 port <b>Blinking</b> – short-circuit or output overload
YELLOW LED LIGHT (LINK) The connection status of LAN devices, 10/100Mb/s and data transmission		<b>OFF</b> - no connection <b>ON</b> - the device is connected; 10/100Mb/s <b>Blinking</b> – data transmission
OPTICAL INDICATION AT THE UP LINK PORTS		
GREEN LED LIGHT		Applies only to the right side port: No light ( <b>OFF</b> ) - No supply voltage of the switch <b>ON</b> - the switch is powered, correct operation
YELLOW LED LIGHT (LINK) The connection status of LAN devices, 10/100Mb/s and data transmission		<b>OFF</b> - no data transmission <b>ON</b> - the device is connected: 10/100Mb/s <b>Blinking</b> – data transmission



#### WEEE LABEL

Waste electrical and electronic equipment must not be disposed of with normal household waste. According to the European Union WEEE Directive, waste electrical and electronic equipment should be disposed of separately from normal household waste.

#### Pulsar

Siedlec 150, 32-744 Łapczyca, Poland  
Tel. (+48) 14-610-19-40, Fax. (+48) 14-610-19-50  
e-mail: [biuro@pulsar.pl](mailto:biuro@pulsar.pl), [sales@pulsar.pl](mailto:sales@pulsar.pl)  
http:// [www.pulsar.pl](http://www.pulsar.pl), [www.zasilacze.pl](http://www.zasilacze.pl)