

USER'S MANUAL

CONTENTS

1. GUIDE	2
1.1 IMPORTANT SAFETY INSTRUCTIONS.....	2
1.2 GENERAL DESCRIPTION.....	2
1.3 PRODUCT OVERVIEW & ILLUSTRATION.....	3
2. FEATURES	4
3. THE MENU OSD INSTRUCTION	5
4. TECHNICAL SPECIFICATION	7

1. GUIDE

1.1 IMPORTANT SAFETY INSTRUCTIONS

Thank you for choosing our product. Before installation, we would like to remind you some notes, which is very important for operating safely and properly, as follows:

- Be sure to read this user manual before starting your operation.
- When the unit is suddenly moved to a hot area from a cold area, it may cause some problems. In that case, turn off the power, and turn on again after 1-2 hours.
- Keep modulator placed in clean space with sufficient ventilation.
- Do not cover the modulator with or place it on a unit that emits heat.
- Clean the case by a soft cloth with a little washing liquid.
- Do not remove the cover.
- Do not let the unit exposed to extreme heat, cold or humid conditions.
- No liquids or any other materials to come inside of the unit.

1.2 GENERAL DESCRIPTION

The machine is a composite video input standard definition DVB-T single route modulator which provides COFDM RF signal in range of 50-860MHz.


It consists of A/D, Coding, Modulation, Frequency conversion which provides bandwidth of 6/7/8MHz to select.

It is designed to achieve CVBS and HD input, and it can also supports standard H.264 encoding.

It is an excellent choice to transport video/audio signals from TV satellite receivers, surveillance camera or video/media players to a LCD TV or set-top-box.

It can be used in series with other modulator so the number of channels in the coaxial cable no the SMATV system can be increased as desired.

1.3 PRODUCT OVERVIEW & ILLUSTRATION

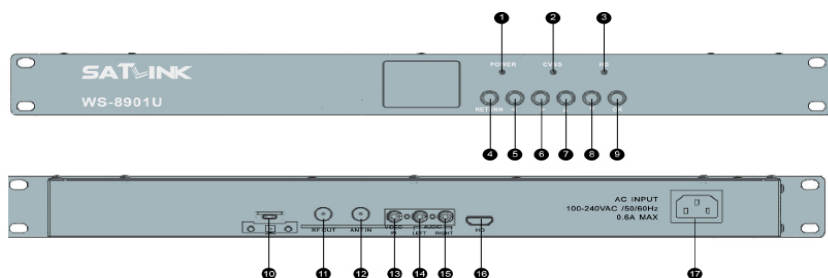

NO	Description	FUNCTION
1	POWER	Power indicator light
2	CVBS	CVBS indicator light
3	HD	HD signal indicator light
4	RETURN	Return to superior menu and save settings
5	◀	Switch settings in menu or cursor left
6	▶	Switch settings in menu or cursor right
7	▲	Change the frequency point or cursor up
8	▼	Change the frequency point or cursor down
9	OK	Confirm the current operation
10	PC	Connect to PC for upgrade
11	RF OUT	Rf output port
12	ANT IN	Terrestrial Digital signal input port
13	VIDEO IN	Composited video input port supports NTSC and PAL
14	LEFT	Left channel
15	RIGHT	Right channel
16	HD IN	HD signal input port
17	AC INPUT	100~240V alternating current input port




2. FEATURES

- High level of integration, high-performance, full-featured, integrated design
- Single input modulator that converts AV source/HD source to a DVB-T channel
- Standard COFDM modulation and H.264 encoding
- Multiple video format compatibility including 576i(PAL) / 480i(NTSC)
- Bandwidth: 6/7/8MHz
- Frequency range: 50~860MHz
- Continuously adjustable RF signal output level range 70dBuV from 100dBuV, step 1dBuV
- 1.7-inch color LCD display
- Carriers 2K and 8K
- User friendly setup and control
- Upgrade by PC

3. THE MENU OSD INSTRUCTION

Modulator will initialize to the boot interface after power on, and press **OK** into the main menu.

- **OSD Language:** press **◀▶** key to change language.
- **Country:** press **◀▶** key to enter country list, and use **▲▼** key to select a country, then press to confirm.
- **Channel Name:** press **◀▶** key to change the channel number.
- **Frequency:** frequency setting in range of 50~860MHz, press **◀▶** key to move cursor and press **▲▼** key to change numbers.
- **BandWidth:** press **◀▶** key to select bandwidth of 6/7/8MHz.
- **Carrier:** carrier setting, press **◀▶** key to select 2K or 8K.
- **Modulate:** modulation mode setting, press **◀▶** key to select QPSK, 16QAM or 64QAM.
- **FEC:** FEC code rate setting, press **◀▶** key to select 1/2, 2/3, 3/4, 5/6 or 7/8.
- **Guard Interval:** guard interval setting, press **◀▶** key to select 1/4, 1/8, 1/16 or 1/32.
- **RF Output Level:** RF output level setting, press **◀▶** key to change value in range of 70~100dBuV.
- **Signal Source:** press **◀▶** key to choose HD or CVBS.
- **Key Tone:** press **◀▶** key to ON/OFF key tone.
- **LCN:** use **▲▼◀▶** key to edit logical channel number.
- **Program Name:** use **▲▼◀▶** key to edit program name of current frequency point.
- **Service Provider:** use **▲▼◀▶** key to edit operator name.
- **Factory Set:** press **OK** to confirm factory reset.

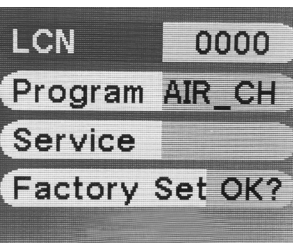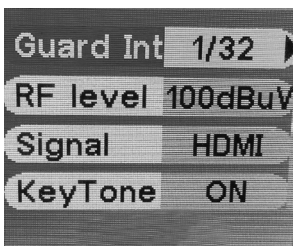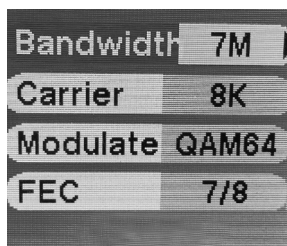

Note: The operation would be only valid under current one route modulator.

4. TECHNICAL SPECIFICATION

Modulator	Standard	DVB-T
	Constellation	QPSK / 16QAM / 64QAM
	Bandwidth	6 / 7 / 8 MHz
	Carriers	2K / 8K
	Guard Interval	1/4, 1/8, 1/16, 1/32
	Code Rate	1/2, 2/3, 3/4, 5/6, 7/8
	MER	35 dB
	Frequency Range	50 ~ 860 MHz
	Output Level	70 ~ 100 dBuV
	Output Impedance	75Ω
Video	Input Format	CVBS/HD
	Encoding Format	H.264
	Video Resolution	576i PAL / 480i NTSC/1080p
	Connector	RCA/HD 1.3
Audio	Input Format	Stereo L/R channel
	Encoding Format	MPEG-1 Audio Layer II
	Connector	RCA
General	Power Source	AC 100~240V
	Operating Temperature	0 ~ +50°C
	Dimensions	480mm(L) × 204mm(W) × 45mm(H)
	Weight	2.1Kg

Note:

- 1.Since the modulator uses H.264 encoding, users need using DVB-T service which supports standard H.264 encoding for normal display.
- 2.HD program which contains HDCP agreement protection will not play normally, such as Blue-ray Disc and so on. Press 3 seconds in the boot interface can resolve this problem.
- 3.If the image and sound are not synchronous, please insert HD port again, it will return to normal.

USER'S MANUAL