

Installation Guide

Gigabit Easy Smart PoE+ Switch

Power

On: Power on
Off: Power off

PoE Status

On: Providing PoE power
Flashing: PoE fault
Off: Not providing PoE power

Link/Act; Uplink 1, Uplink 2


Green On:
Running at 1000 Mbps, but no activity.
Green Flashing:
Running at 1000 Mbps and is transmitting or receiving data.
Yellow On:
Running at 10/100 Mbps, but no activity.
Yellow Flashing:
Running at 10/100 Mbps and is transmitting or receiving data.
Off:
No device is linked to the corresponding port.

PoE MAX

For TL-SG105PE:
On: $58\text{ W} \leq \text{Total power supply} < 65\text{ W}$
Flashing: Total power supply $\geq 65\text{ W}$
Off: Total power supply $< 58\text{ W}$
For TL-SG108PE:
On: $57\text{ W} \leq \text{Total power supply} < 64\text{ W}$
Flashing: Total power supply $\geq 64\text{ W}$
Off: Total power supply $< 57\text{ W}$
For TL-SG1210MPE:
On: $116\text{ W} \leq \text{Total power supply} < 123\text{ W}$
Flashing: Total power supply $\geq 123\text{ W}$
Off: Total power supply $< 116\text{ W}$

Note: For simplicity, we will take TL-SG108PE for example throughout this Guide.

Connection

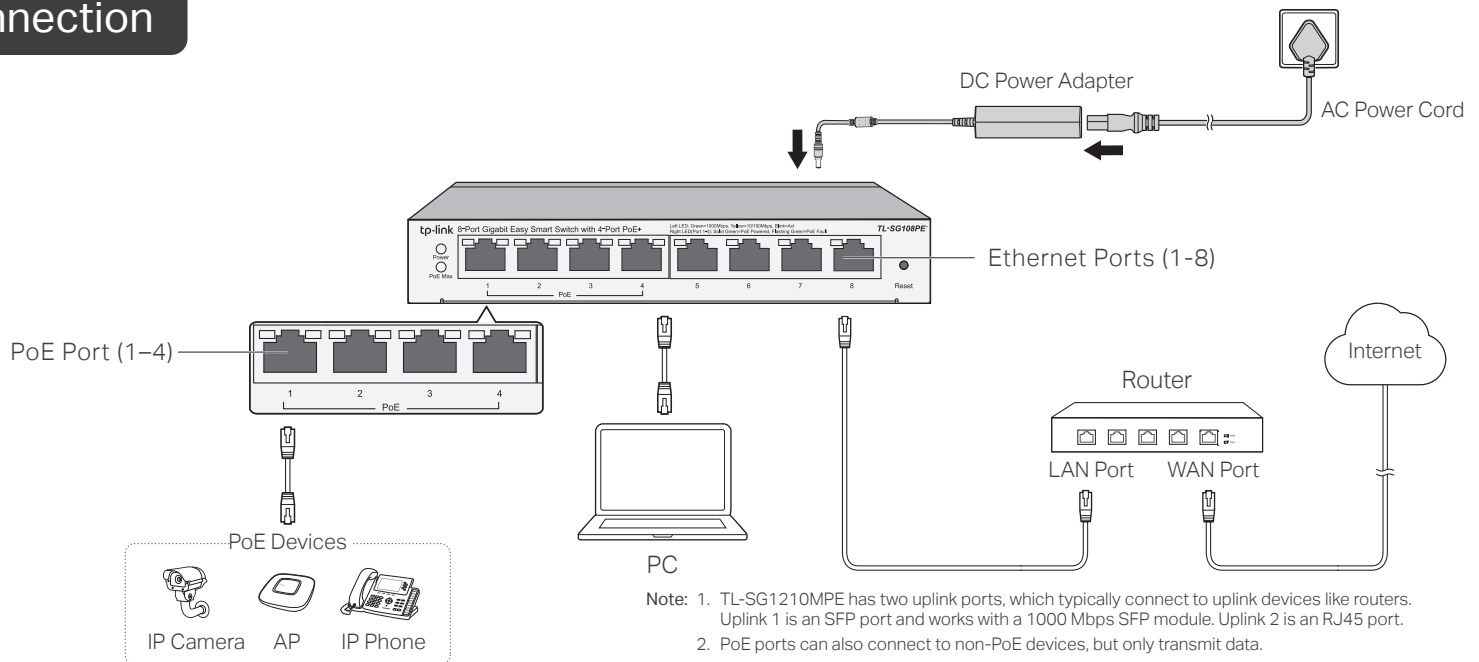

Note: 1. TL-SG1210MPE has two uplink ports, which typically connect to uplink devices like routers. Uplink 1 is an SFP port and works with a 1000 Mbps SFP module. Uplink 2 is an RJ45 port.
2. PoE ports can also connect to non-PoE devices, but only transmit data.
3. For TL-SG105PE, maximum PoE power is 30 W for each PoE port and 65 W for all PoE ports in total. For TL-SG108PE, maximum PoE power is 30 W for each PoE port and 64 W for all PoE ports in total. For TL-SG1210MPE, maximum PoE power is 30 W for each PoE port and 123 W for all PoE ports in total.

Configuration

The switch is plug and play. To configure the switch, you can use the Web-based GUI or the configuration utility. The utility is only supported on Windows now.

Using the Web-based GUI

- Find out the IP address of the switch.
 - By default, the switch receives an IP address from a DHCP server (typically a router with DHCP function enabled) in your network. You can find out this IP address on the DHCP server.
 - If the switch cannot receive an IP address from a DHCP server, it uses the static IP address of **192.168.0.1**, with a subnet mask of **255.255.255.0**.
- Configure IP address on your PC to make sure the switch and PC are in the same subnet.
 - If the switch uses an IP address assigned by a DHCP server, set your PC to obtain an IP address automatically from the DHCP server.
 - If the switch uses **192.168.0.1** as the IP address, configure your PC's IP address as **192.168.0.x** ("x" ranges from 2 to 254), and subnet mask as **255.255.255.0**.
- Launch a web browser on your PC, enter the IP address of the switch in the address bar and press **Enter**. Log in with **admin** as both user name and password.



Now you can configure the switch using the Web-based GUI. For further information, refer to the **User Guide**.

Go to <https://www.tp-link.com/support>, search the model number of your switch, and you can find this guide on the product **Support** web page.

- Note:**
- For certain devices, you may need to change the password the first time you log in, which will better protect your network and devices.
 - If the switch gets a new IP address from the DHCP server, your connection to the switch will be lost. Enter the new IP address in your browser to access the switch again.

Using the Configuration Utility

- Go to <https://www.tp-link.com/support> and search the model number of your switch. Download the **Easy Smart Configuration Utility** from the product **Support** web page on your PC.
- Decompress the downloaded file, run the installation wizard and follow the prompts to install the **Easy Smart Configuration Utility**.
- Double click the icon on the desktop, and the utility Home page will display a list of TP-Link switches on the local network.
- Click to find out IP parameters of the switch.
 - If the switch uses an IP address assigned by a DHCP server, set your PC to obtain an IP address automatically from the DHCP server.
 - If the switch uses **192.168.0.1** as the IP address, configure your PC's IP address as **192.168.0.x** ("x" ranges from 2 to 254), and subnet mask as **255.255.255.0**.
- Double click the switch that you want to configure. Log in with **admin** as both user name and password.

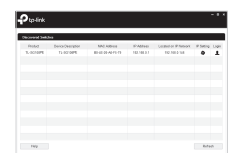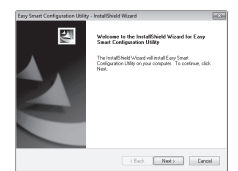

Now you can configure the switch using the configuration utility. For further information, refer to the **Easy Smart Configuration Utility User Guide**.

Go to <https://www.tp-link.com/support>, search the model number of your switch, and you can find this guide on the product **Support** web page.

Specifications

General Specifications

Standard	IEEE802.3i, IEEE802.3u, IEEE802.3ab, IEEE802.3af, IEEE 802.3at, IEEE802.3x, IEEE802.1p, IEEE802.1q For TL-SG1210MPE: IEEE802.3z
Interface	For TL-SG105PE/TL-SG108PE: 5/8 10/100/1000 Mbps RJ45 Ports Auto-Negotiation, Auto MDI/MDIX PoE Ports: Port 1–Port 4 For TL-SG1210MPE: 9 10/100/1000 Mbps RJ45 Ports Auto-Negotiation, Auto MDI/MDIX 1 1000 Mbps SFP port PoE Ports: Port 1-Port 8
Data Transfer Rate	Ethernet: 10 Mbps (Half Duplex), 20 Mbps (Full Duplex) Fast Ethernet: 100 Mbps (Half Duplex), 200 Mbps (Full Duplex) Gigabit Ethernet: 2000 Mbps (Full Duplex)
Network Media (Cable)	10Base-T: UTP category 3, 4, 5 cable (maximum 100 m) EIA/TIA-568 100 Ω STP (maximum 100 m) 100Base-TX: UTP category 5, 5e cable (maximum 100 m) EIA/TIA-568 100 Ω STP (maximum 100 m) 1000Base-T: UTP category 5e cable or above (maximum 100 m) EIA/TIA-568 100 Ω STP (maximum 100 m) 1000BASE-SX/LX/LX10/BX10: MMF, SMF (Only for TL-SG1210MPE)
Power Supply	External Power Adapter Input: 100-240 V AC, 50/60 Hz Output: 53.5 V DC/2.43 A (For TL-SG1210MPE) 53.5 V DC/1.31 A (For TL-SG105PE/TL-SG108PE)
Switching Capacity	TL-SG105PE: 10 Gbps TL-SG108PE: 16 Gbps TL-SG1210MPE: 20 Gbps
MAC Address Table	TL-SG105PE: 2K, automatically learning, automatically aging TL-SG108PE/TL-SG1210MPE: 4K, automatically learning, automatically aging
Wall Mountable	Yes
Distance Between Mounting Holes	TL-SG105PE: 39 mm TL-SG108PE: 94 mm TL-SG1210MPE: 150 mm

Environmental and Physical Specifications

Certification	FCC, CE, RoHS
Operating Temperature	0 °C to 40 °C (32 °F to 104 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Operating Humidity	10% to 90%RH non-condensing
Storage Humidity	5% to 90%RH non-condensing

PoE Disclaimer

The speed of the ports in extend mode will downgrade to 10 Mbps. The actual transmission distance may vary due to power consumption of PoE-powered devices or the cable quality and type. PoE budget calculations are based on laboratory testing. Actual PoE power budget is not guaranteed and will vary as a result of client limitations and environmental factors.

EU Declaration of Conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863.

The original EU declaration of conformity may be found at <https://www.tp-link.com/en/ce>

Frequently Asked Questions (FAQ)

Q1. Why is the Power LED not lit?

The Power LED should be lit when the power system is working normally. If the Power LED is not lit, please try the following:

- A1: Make sure the power adapter is connected to the switch with power source properly.
- A2: Make sure the voltage of the power supply meets the requirements of the input voltage of the switch.
- A3: Make sure the power source is ON.
- A4: On the LED On/Off configuration page, check whether the LED status is on. By default, the LED status is on.


Q2. Why is the Link/Act LED not lit while a device is connected to the corresponding port?


Please try the following:


- A1: Make sure that the cable connectors are firmly plugged into the switch and the device.
- A2: Make sure the connected device is turned on and works normally.
- A3: The cable must be less than 100 meters long (328 feet). If Extend Mode is enabled, it should be less than 250 meters (820 feet).
- A4: On the LED On/Off configuration page, check whether the LED status is on. By default, the LED status is on.

Q3. Why is PoE/PoE+ Port not supplying power for PoE devices?

When the total power consumption of connected PoE devices exceeds the maximum, the PoE port with a smaller port number has higher priority. The system will cut off power to the ports with larger port numbers to ensure supplying to other ports. Take TL-SG108PE as an example. Port 1, 2 and 4 are consuming 15.4 W respectively. If an additional PoE device with 18 W is inserted to port 3, the system will cut off the power of port 4 to compensate for the overload.

 To ask questions, find answers, and communicate with TP-Link users or engineers, please visit <https://community.tp-link.com> to join TP-Link Community.

 For technical support, the user guide and other information, please visit <https://www.tp-link.com/support>, or simply scan the QR code.

 If you have any suggestions or needs on the product guides, welcome to email techwriter@tp-link.com.cn.

Some models featured in this guide may be unavailable in your country or region. For local sales information, visit <https://www.tp-link.com>.



PoE Disclaimer

The speed of the ports in extend mode will downgrade to 10 Mbps. The actual transmission distance may vary due to power consumption of PoE-powered devices or the cable quality and type. PoE budget calculations are based on laboratory testing. Actual PoE power budget is not guaranteed and will vary as a result of client limitations and environmental factors.

EU Declaration of Conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863.

The original EU declaration of conformity may be found at <https://www.tp-link.com/en/ce>

Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Adapter shall be installed near the equipment and shall be easily accessible.
- Place the device with its bottom surface downward.

